



BACK

FRONT

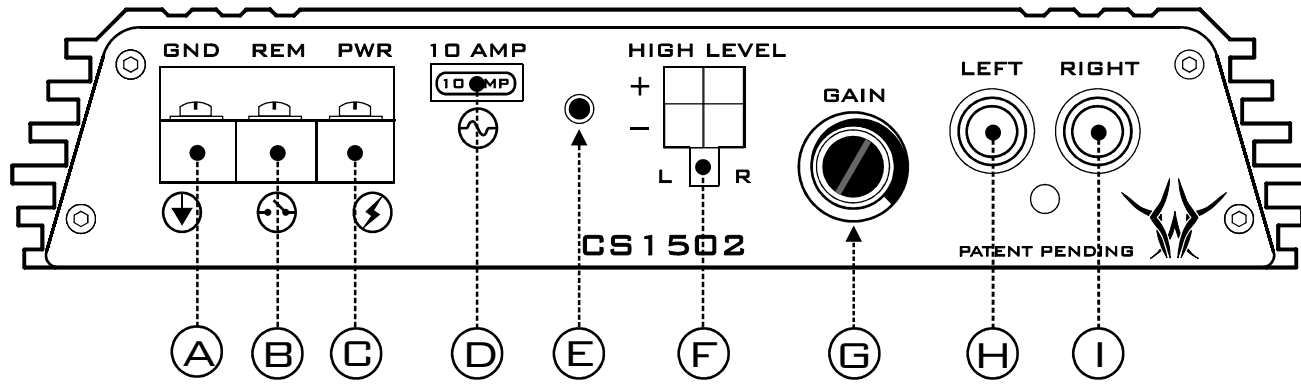

- A** Ground Terminal
- B** Remote Terminal
- C** Power Terminal
- D** 10AMP Fuse
- E** Power Indicator
- F** High Level Input

- G** Gain Adjustment Knob
- H** Left Low Level Input
- I** Right Low Level Input
- J** Right Control Cable Out
- K** Left Control Cable Out
- L** Highly Recommended

	TITLE: SYSTEM CONFIG, CONTROLLER DIAGRAM	
	PART NO: N/A	REV: 01
	FILE: N/A	DATE: 11/01/05
FACEPLATE LEGEND		