

2015 - NEWER ROAD GLIDE GLOVEBOX DETENTS



**TO INSTALL THEM CORRECTLY, WE
RECOMMEND FOLLOWING THE INSTRUCTIONS CAREFULLY.**




STEP 1. Clean hinge using alcohol pad. Let area dry or wipe with clean cloth.

STEP 2. Peel red liner off the back of detent device.



STEP 3. Line up detent device in the middle of the hinge with the top registered firmly against lip of hinge. Refer to the photo showing detent being held at an angle against the lip.

STEP 4. Press detent onto hinge while keeping top of detent against the lip of the hinge. Pull door up a bit more if front lip of detent hits the back of the glove box. This is normal.

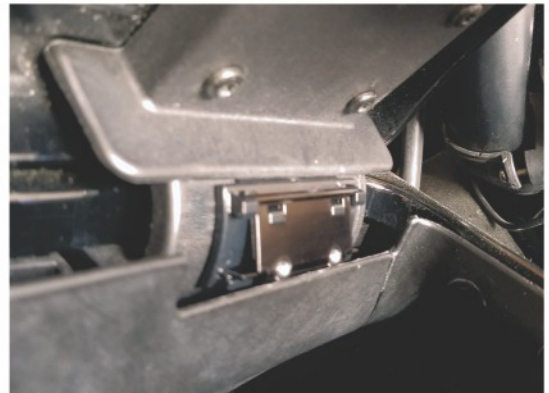

STEP 5. Apply pressure to the detent to ensure adhesion of the double stick tape to the hinge. Release the door allowing it to rest on the detent steel balls. It is best to leave the door open resting on the detent for several minutes. This helps the double stick tape adhere. Repeat steps 1-5 to other side.